

# Bowmonk

INCORPORATING TAPLEY INSTRUMENTATION

## BC Print User Guide




**BC Print Release Version 1.2**


### **Installation:**

First, you will need to download the BC Print software from this page on the Bowmonk website:  
<https://www.bowmonk.com/product/bcprint-electronic-printing/>


After downloading the software, you need to extract the folder. To do this, right-click on the folder and then click **'extract'** / **'extract all'**.

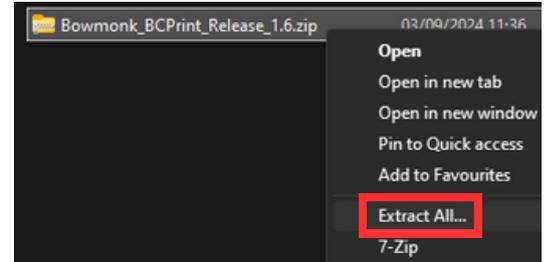


Click **'Extract'** in the bottom right of this pop-up.

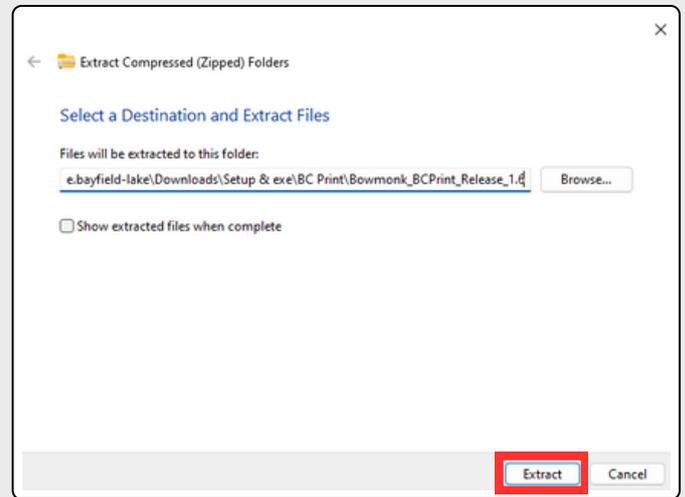


There will now be a new folder, use this folder to install BC Print. Double click the folder.

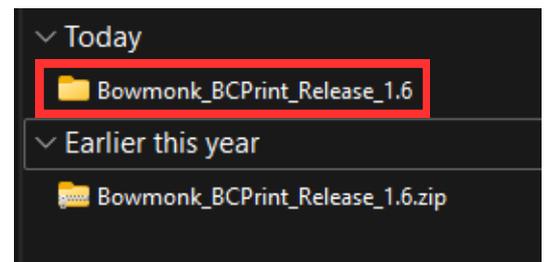

Double click on the **'BCPrint\_Installer'** folder, then double click **'Setup.exe'**.

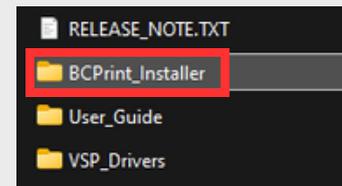

Run through the installer by clicking **'Next'** when necessary.

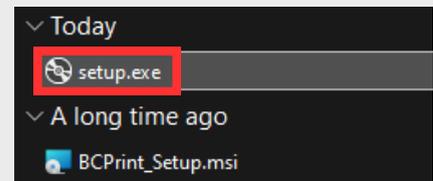


Once BC Print is installed, you will have a new icon on your desktop. Double click it to open BC Print.



After opening BC Print for the first time, you will be asked for your Company Name, email address and **product key**.


The **product key** will need to be purchased from Bowmonk by contacting us via phone on **+44 (0)1603 485 153** or email **[sales@bowmonk.com](mailto:sales@bowmonk.com)**.

When you have entered these details, click **'Register'**.

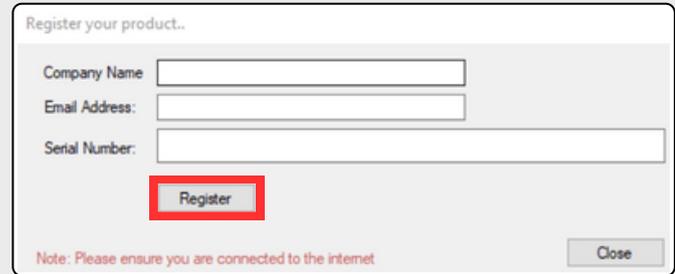

## How to use:

The first thing we need to do is set-up some details in the program for ease-of-use later. Click **'Settings'** in the top left of the software.

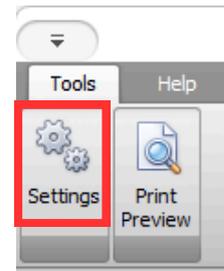


This Settings box will pop-up. Here, you should fill in the boxes for Company Address and Testers.

*(Testers names should be filled out like so:  
**Greg Davies, Russell Howard, Lee Evans**)*

You can also choose the results to show in either MPH or KMH, as well as other optional settings underneath. Feel free to change these to what you require them to be.


When you are finished changing the settings, click **'Save'**.

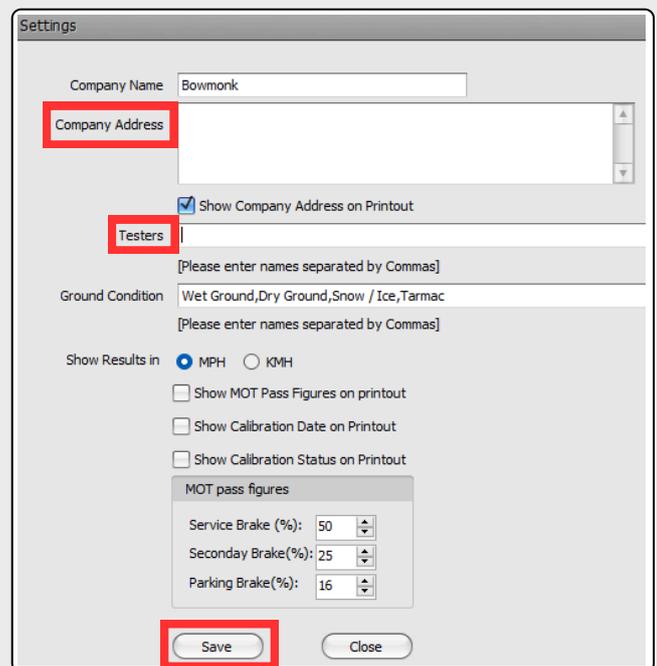


Now, connect your BrakeCheck decelerometer to the PC using the provided USB cable.



Now the decelerometer is connected to the PC, click **'Download All Results'**.

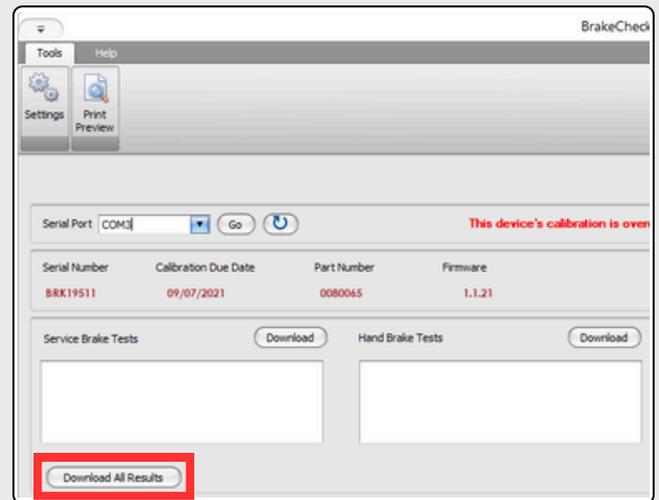


After the program has searched for results, the results from your decelerometer will show up in each box which you have results for.

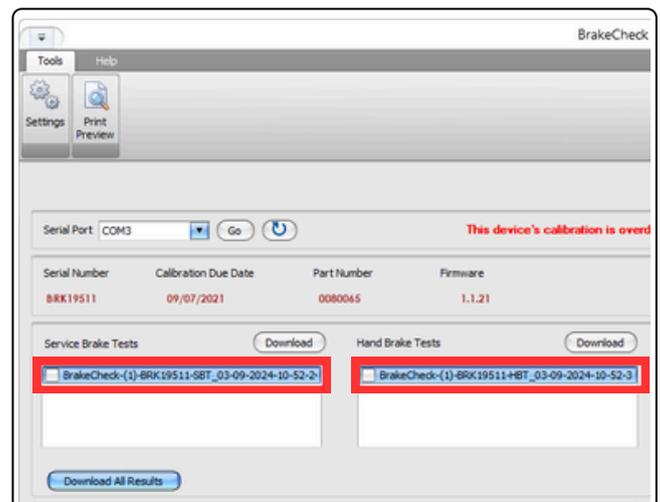

You now need to select the results you wish to print by clicking the empty box next to it. Also, you can fill in the additional information section to whichever degree of information you wish to print. When this is done, click **'Print'**.

*(You can also save results to your computer by clicking **'Save'**)*

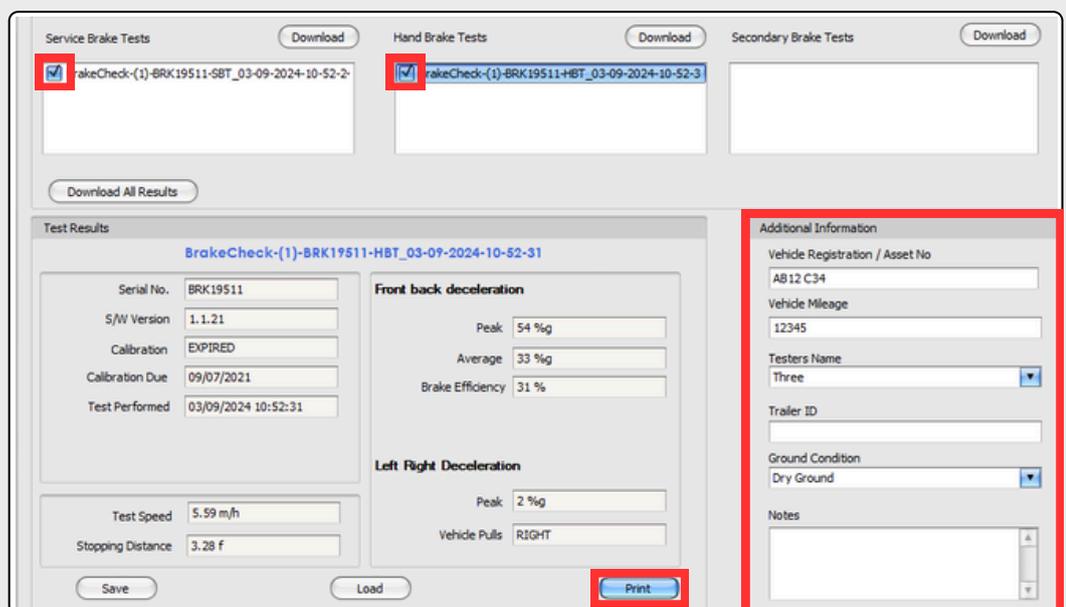

Now you will see a preview of what your print will look like. If you are happy with it, click **'Print'**. If you are not, you can go close this window and change what you need to before clicking Print again.

*(You can also save this as a PDF by clicking the **'Create PDF'** button next to Print)*



Visit our website below for additional information and support.

Contact us if you wish to purchase a license for BC Print.



**+44 (0)1603 485 153**



**info@bowmonk.com**



**www.bowmonk.com**